



ELEKTRA™ SERIES 600

BUG ZAPPER

INSTRUCTIONS


P/N 969

Dear Customer,

Please read these user instructions carefully before connecting the appliance to prevent damage due to incorrect use. Read the safety instructions very carefully.

This Bug Zapper utilizes a specially treated UV-A light, which is proven to be the most effective lure for light sensitive flying insects, such as flies, moths, mosquitoes, and other flying insects. These lured insects are then electrocuted by the Zapper's high voltage inner grid. No chemicals, no smell, no sprays, and no mess. This Bug Zapper is pollution free and is harmless to humans and pets. It is ideal for using in homes, offices, factories, food outlets, hospitals, and more.

WARNINGS:

1. Household use only. Suited for indoor and outdoor use.
2. High voltage!  Do not touch the inner electric grids.
3. Never put metal objects inside the grids.
4. Keep away from flammable objects.
5. Check the local voltage before operating.
6. Hang on a ceiling or a place where children cannot reach.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
8. Keep the appliance and its cord out of reach of children.
9. Children cannot play with this appliance. Children should be supervised to ensure that they do not play with the appliance.
10. An electric shock hazard may exist if water from a garden hose is directed at the appliance.
11. When using extension cords, keep the socket-outlet away from moisture and avoid damage to the cord.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid any hazards. Any other servicing should be performed by an authorized service representative.

13. Unplug the appliance before cleaning. Clean the plastic enclosure with dry clothes and empty the bottom collection tray every week or as needed.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING; KEEP AWAY FROM WATER

1. The product is for household use only.
2. Use only extension cords which have plugs and receptacles which accept the product's plug. Replace or repair damaged cords.
3. The electrical rating of the extension cord must be as great as the electrical rating of the product.
4. Don't Abuse Cord – Never carry the product by its cord or yank it to disconnect it from a receptacle. Keep cord away from heat, oil, and sharp edges.
5. Disconnect the product from the power supply when not in use, before servicing, when changing bulbs, cleaning, and any other similar actions.
6. Do not insert foreign objects into this product.
7. Outdoor extension cords must be used with outdoor use products and should be surface marked with suffix letters "W-A" with a tag stating "Suitable for Use with Outdoor Appliances."
8. The connection to an extension cord should be kept dry and off the ground.
9. Store products indoors when not in use – out of reach of children.
10. Do not clean this product with a water spray or other similar method.
11. The product should only be connected to a circuit that is protected by a ground-fault circuit-interrupter (GFCI).
12. CAUTION - Risk of UV exposure. Ensure the product is installed in such a way that no continuous human activity is likely to be performed within 0.43m distance of the unit while illuminated.

BULB REPLACEMENT/REMOVAL INSTRUCTIONS

If the lamp in the insect killer needs replacing, please follow the instructions below.


CAUTION : Ensure the lamp is disconnected from the mains prior to changing the lamp.

1.




Remove the collection tray by holding the appliance and twisting the base 90 degrees anti- clockwise as shown in the picture.

2.

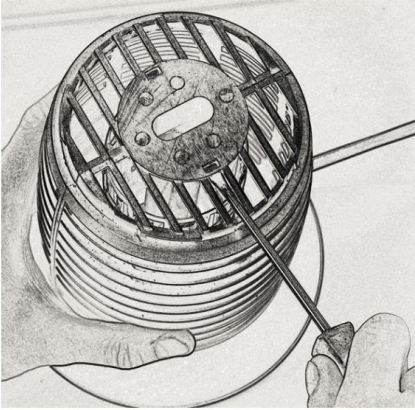

To access the lamp, rest a screwdriver on the base of the outer mesh and under one of the two clips, before levering the lamp holder up and away.

3.

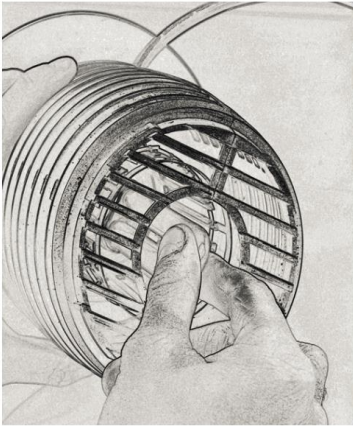

Remove the lamp by using **your thumb and forefinger** and pulling the lamp towards you.

4.



When inserting the new lamp make sure the pins on the lamp, line up with the holes in the lamp holder (see picture) inside the appliance and it is **fitted securely**.

5. Then push the lamp back into place, ensuring the groove in the holder lines up with the lamp, in order to avoid damaging the lamp.
6. Place the collection tray back onto the base of the appliance and twist it clockwise until the tray clicks back into place.

CLEANING THE COLLECTION TRAY

The Insect Killer will require regular cleaning. It is recommended that you clean the tray on a monthly basis, or more frequently if necessary

- Ensure the Insect Killer is disconnected from the mains power prior to cleaning.
- To empty the tray hold the appliance over a rubbish bag, then twist the collection tray anti-clockwise to dislodge it from the rest of the appliance.
- Empty the insects into a bag and wipe the tray with a soft, dry cloth if required.
- Once the tray is clean, place it back on the bottom of the appliance and twist it clockwise until it clicks back into place.

Replacement Bulb
P/N:917

SAVE THESE INSTRUCTIONS!



330 Marsland Drive
Waterloo, ON, Canada N2J 3Z1
info@green-strike.com
www.green-strike.com
Facebook: /GREENSTRIKE
Instagram: @greenstrikeofficial